



## IMPORTANT SAFETY INSTRUCTIONS CONT

- Use the accessories and spare parts only supplied by the manufacturer or its authorized service agent.
- When using the Ash Cleaner to vacuum fireplace ash, no ashes with a temperature more than 40°C should be vacuumed. No ashes and other objects within the fire that are not completely extinguished should be vacuumed.
- Do not use the appliance if the filter is not installed! Do not use other filters except the one attached to the Ash Cleaner.
- The term "Cold Ash" is ash cooled down for a sufficient time without any embers. This can be confirmed by scouring the ash for pockets of embers by using metal tools before using the ash vacuum cleaner. Cold ash does not emit any recognizable heat.
- Substance that can be vacuumed - cold ashes from fireplaces, wood/coal stoves, ashtrays, grill.
- Empty and clean vacuum cleaner before and after vacuuming to avoid the collection of materials that could pose a fire hazard in the vacuum cleaner.
- Do not use for the separation of health-hazardous dusts (dust classes M)
- Do not vacuum soot
- Vacuum only ashes from admissible fuels
- Do not vacuum any hot, burning or glowing objects
- Do not vacuum any objects that are hotter than +40 °C
- Do not vacuum any flammable substances

## DISPOSAL

- Please respect the environment!
- Dispose of the packaging according to the local recycling regulations.
- Dispose of paper and cardboard packaging separately from plastic bags into the corresponding containers.
- Dispose of the appliance at the end of its life span according to environmental regulations.

## ⚠ WARNING

This product is intended for domestic use only.

## TECHNICAL SPECIFICATION

Tank Capacity	15L
Power	800W
Rated voltage	220-240V
Filter	HEPA filter
Rate frequency	50-60Hz
Net weight	3.43kg
Soft hose length	125cm
Power cable length	4metres
Noise	≤76db

Imported and distributed by EasyLife Group Ltd, London NW1 0JP

**Customer service: 0871 855 6100**

For more innovative products from EasyLife please visit:

[www.easylifegroup.com](http://www.easylifegroup.com)



# Ash Vac

## INSTRUCTION MANUAL



Model No. EL5842

Please read carefully before use and keep for future reference

**Customer service: 0871 855 6100**  
For more innovative products from EasyLife please visit:  
[www.easylifegroup.com](http://www.easylifegroup.com)



## Dear Customer

Thank you for purchasing the Ash Vac. Chunky and business-like, this vac is a no-nonsense workhorse. Engineered for cleaning up barbecues, grates, and wood-burning stoves, it makes short work of ash and clinker, wood, coal and charcoal particles. The sort of stuff that would have ordinary vacuum cleaners gasping for air and heading for the repair shop. With the muscle to match its rugged appearance, our Ash Vac is powered by a 800W motor and has a generous 15 litre capacity. Equally suitable for the garage or shed, it will vac up wood shavings, paper/cardboard scraps, even broken glass, nuts, bolts and washers. Fitted with an HEPA filter - so the dust stays in the bag, not in the air you breathe - our Ash Vac comes with an aluminium crevice tool so dirt has no hiding place. With a carrying handle for easy portability, it measures 38cm (H) X25.5cm (D) Hose length: 1.2m. mains cable length: 4.1m

**THE ASH VAC  
CLEANS UP  
WHAT OTHER  
VACS CAN'T**

### PARTS LIST

- A Handle
- B Cover
- C Air inlet
- D Soft hose
- E Power switch
- F Tank
- G Aluminium tube
- H HEPA filter
- I Filter guard
- J Aluminium crevice



### ASSEMBLY

- Remove the Ash Cleaner and accessories from the packaging; please check all the parts are enclosed before using for the first time (see parts list).
- Insert the aluminium tube and crevice into the soft tube, and attach the other end of soft tube into the tank.

### CLEANING THE FILTER

- Please not only the HEPA filter provided with the Ash Cleaner must be used.
- When the tank is full or you experience loss of suction the filter will need to be removed and cleaned.
- To remove the filter simply un-hook the two side catches on the cover.
- Remove the filter guard and filter from the cover by pulling carefully in an upward motion – the parts will separate with a little force.
- To clean the filter it is recommended that you use a soft bristle brush (not included) to remove the dust / ash.
- It is also possible to clean the filter using a garden hose or shower head, simply spray water from the inside of the filter to remove dust / ash. Please leave to dry for at least 24 hours so the filter is completely dry to touch before using.
- To replace simply insert the filter into the filter guard and push into the underneath of the cover.



### IMPORTANT SAFETY INSTRUCTIONS

- The Ash Cleaner is for dry use only
- Check the power supply mains matches the appliance electric rating printed on the label before operation.
- When the appliance is not in operation, please remove plug from the power supply mains.
- The plug must be removed from the socket-outlet before cleaning or maintaining the appliance
- Don't remove the plug by pulling the power cord.
- Do not leave the Ash Cleaner alone when not in use.
- The Ash Cleaner is not to be used by children under the age of 8 years and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should not play with the Ash Cleaner.
- Cleaning and user maintenance should not be undertaken by children without supervision of an adult.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Don't vacuum the following objects: liquid, inflammable and explosive dangerous material, corrosive material and burning ash, match, and cigarette.
- Don't touch the live parts in the appliance.
- Do not use Ash Cleaner for other than intended use.
- Please be careful when cleaning the stairs.

continued overleaf